
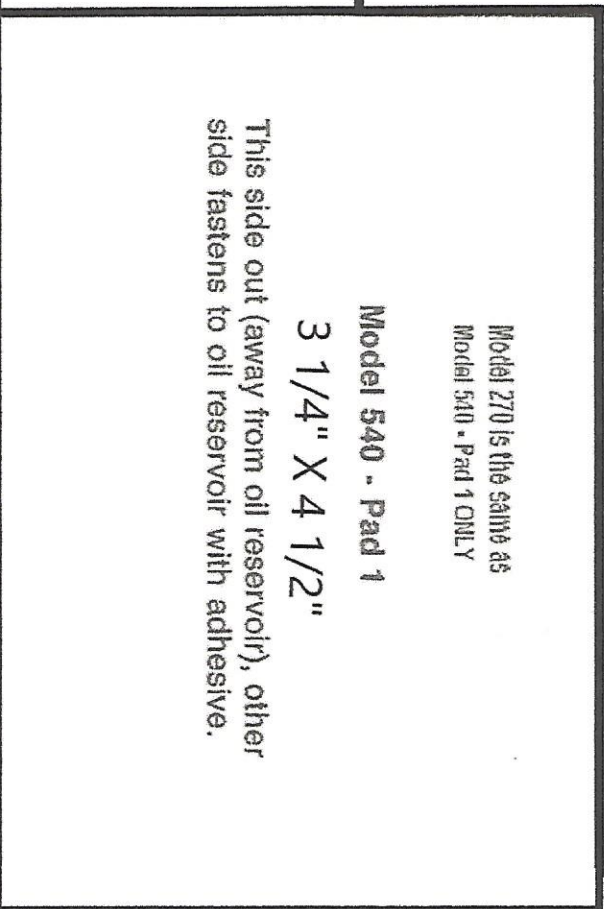
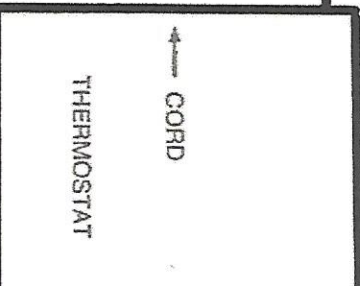
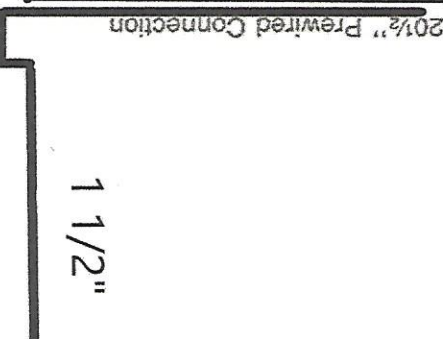


**E-Z HEAT AIRCRAFT ENGINE PREHEATERS
"CUT & TRY" TEMPLATES**

Directions: Cut the template out along the borderlines and align each one on the reservoir (be sure to have the correct side of the template against the reservoir). If embossed numbers are present where the Preheater is to be placed, the numbers can be filed flush with the bottom of the reservoir.

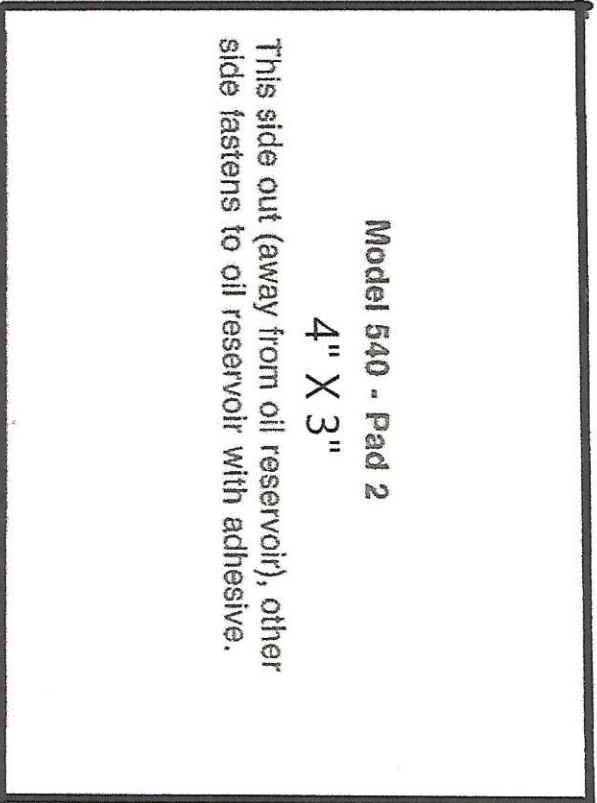

1 3/4"